 
 
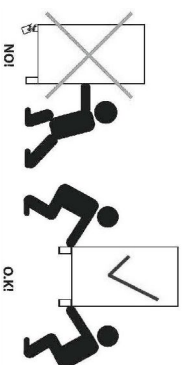 


ALASKA 200

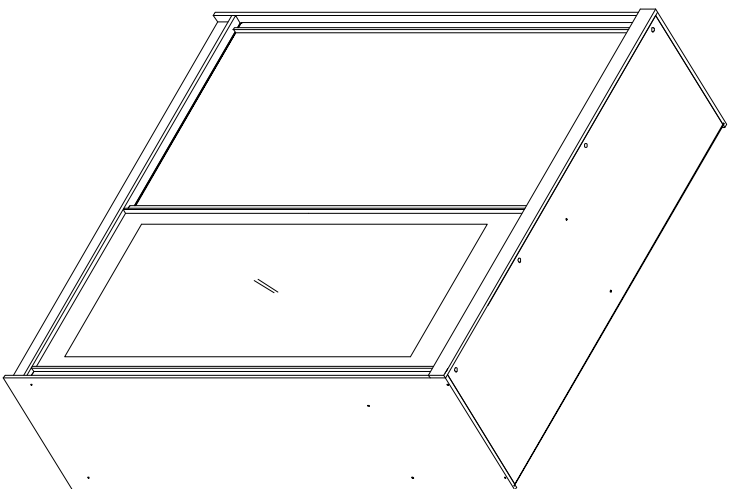

 
21.04.2015

- D** Montageanleitung
- FR** Notice de montage
- NL** Handleiding voor de montage
- CZ** Montážní návod
- HU** Szerelési útmutató
- TR** Montaj talimatı
- GB** Assembly Instructions
- IT** Istruzioni di montaggio
- PL** Instrukcja montażu
- SK** Návod na montáž
- RO** Instrucțiunile de montaj
- RU** Инструкции по монтажу

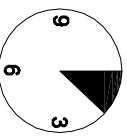


2-2,5





1




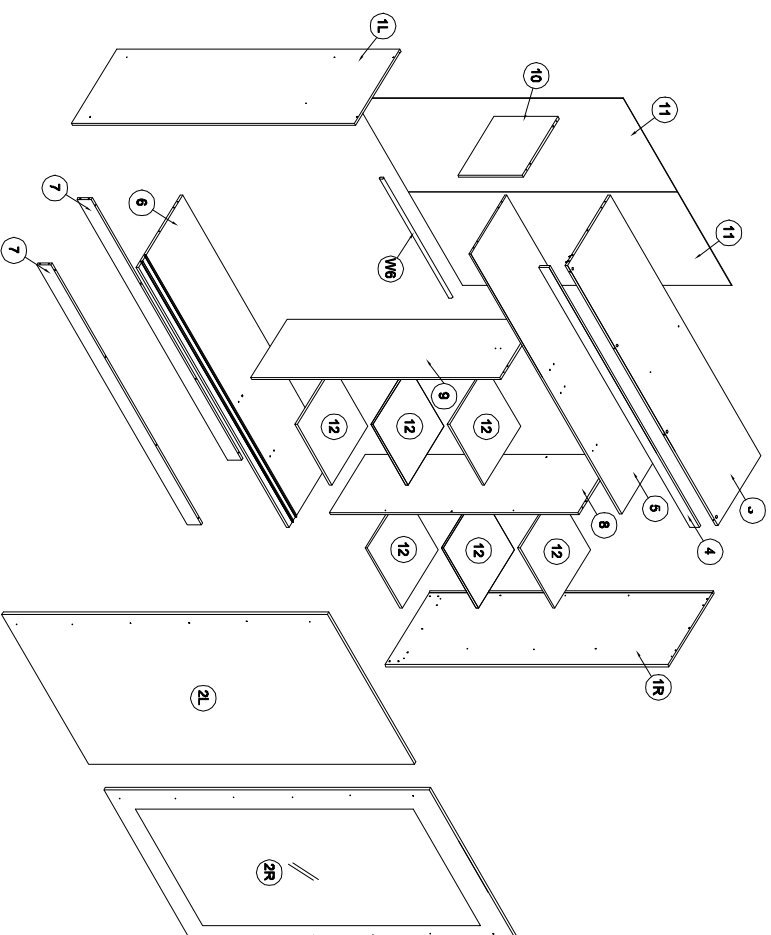


SP X12	V X20	H X16	W X3	DA X4	D X4	DB X2
ZB X24	X X10	ZC X16	NF X3	N X4	YD X4	WB X2
W6 X1	ND X16	B X4	S X1	C X4	Z X4	ZG X1
A X44	T X2	A X1	T X2	A X1	T X2	A X1

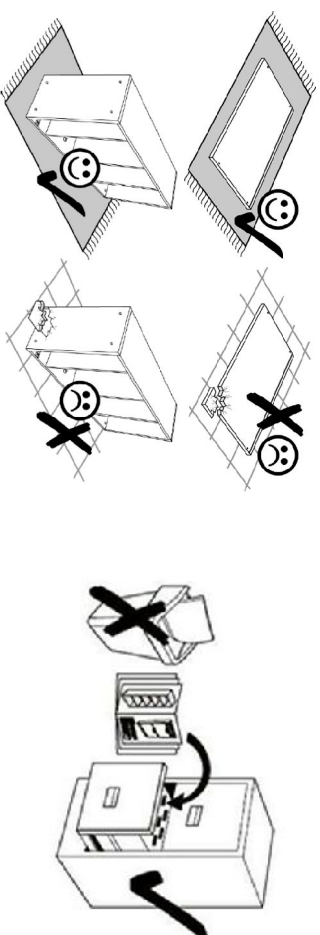 


2

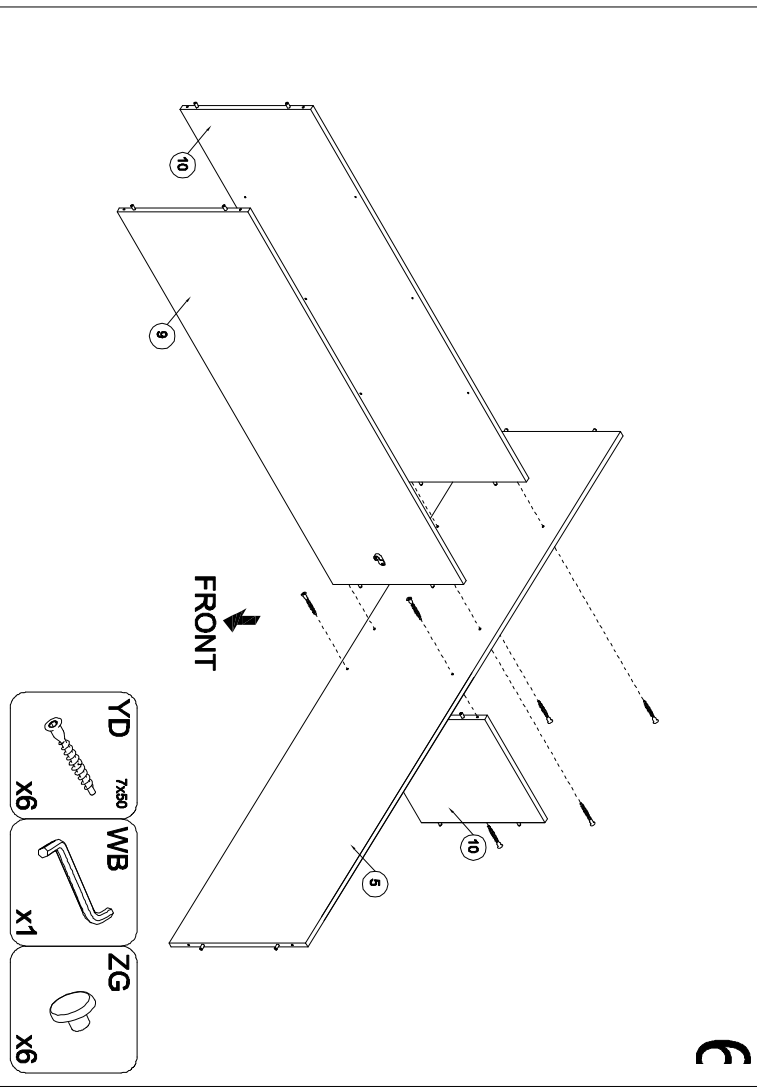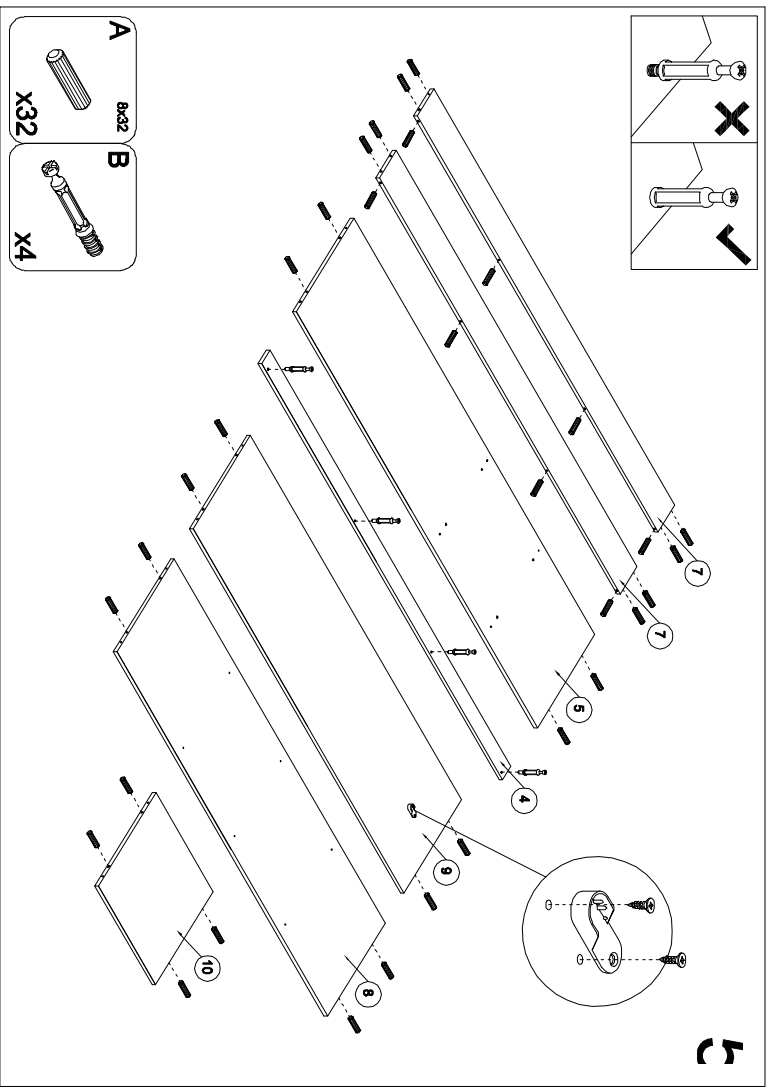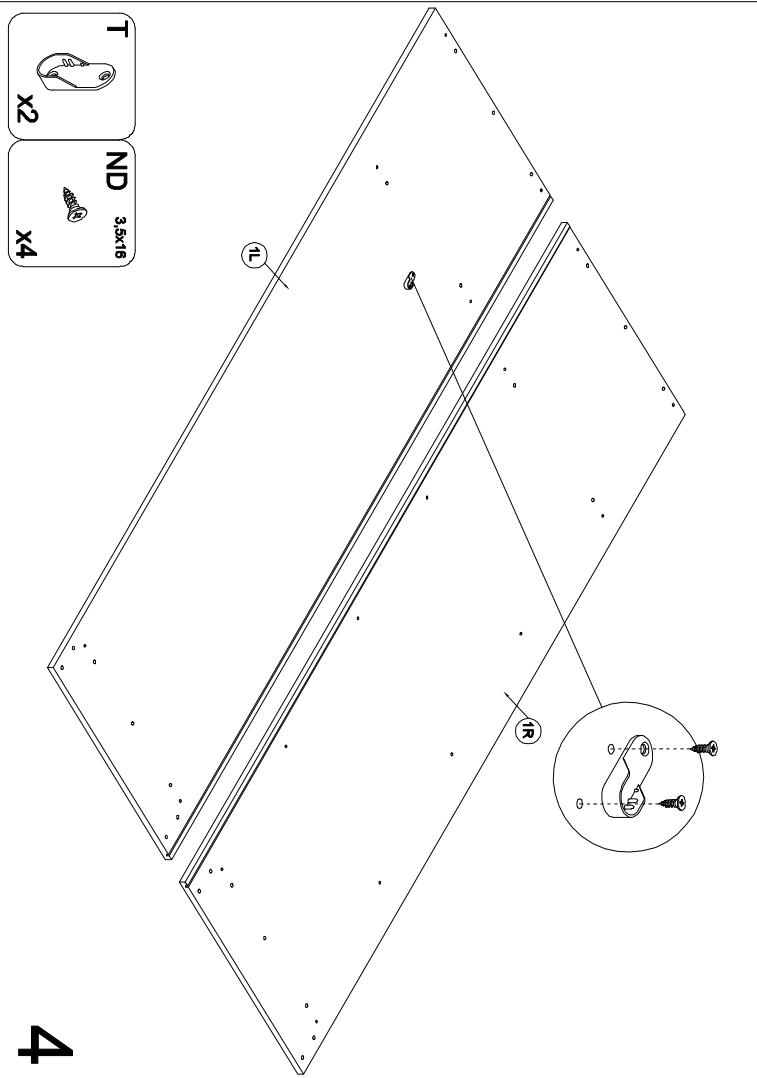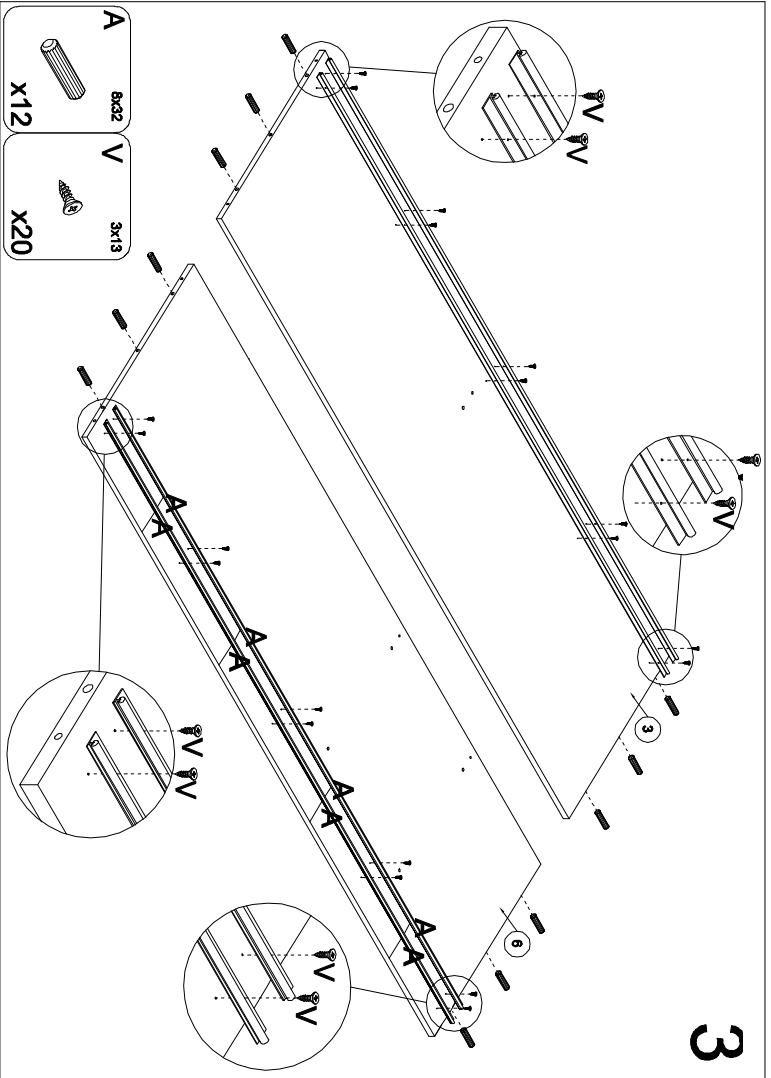    

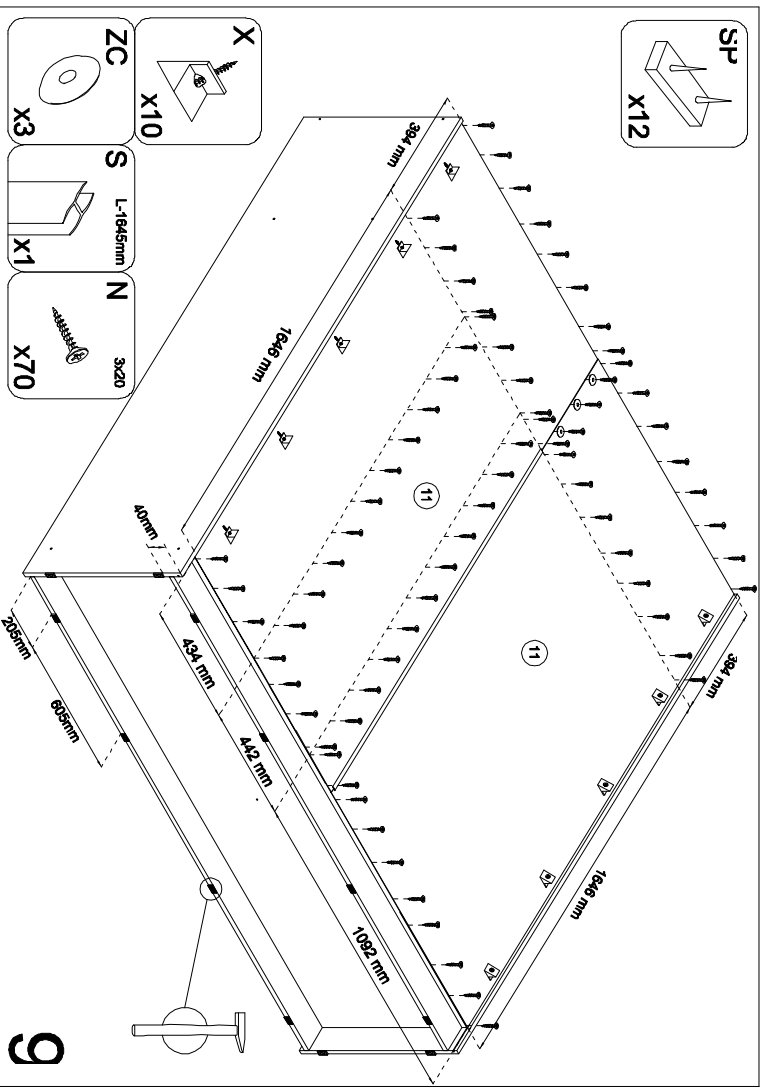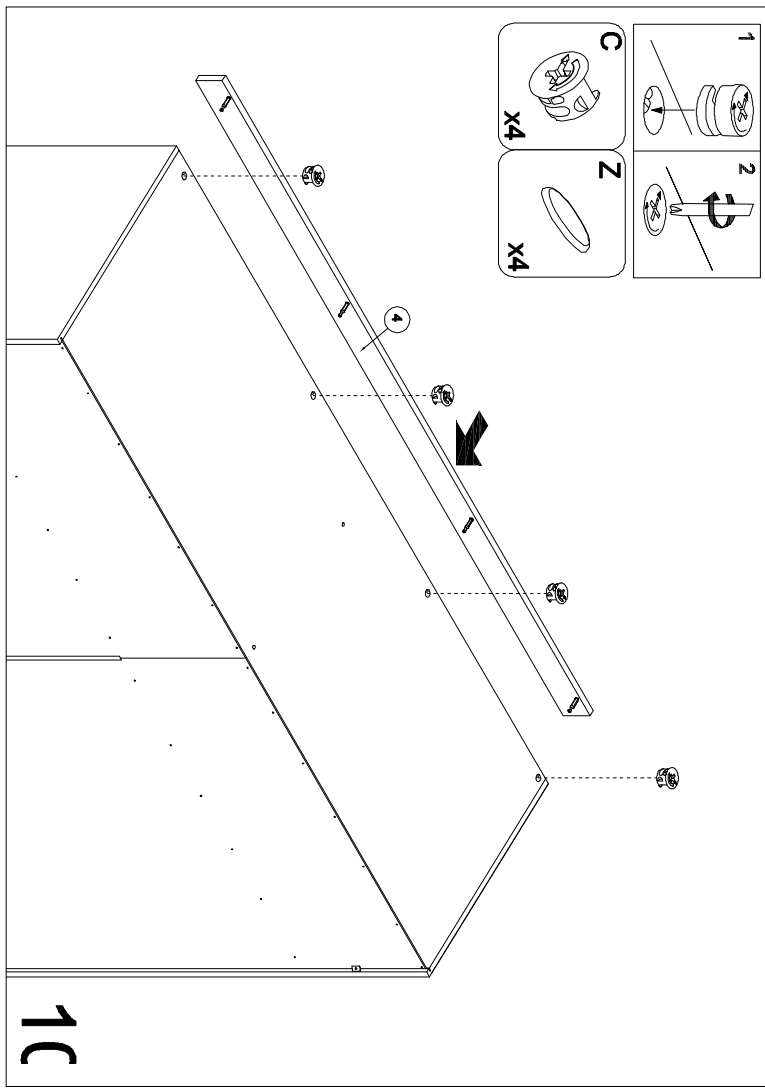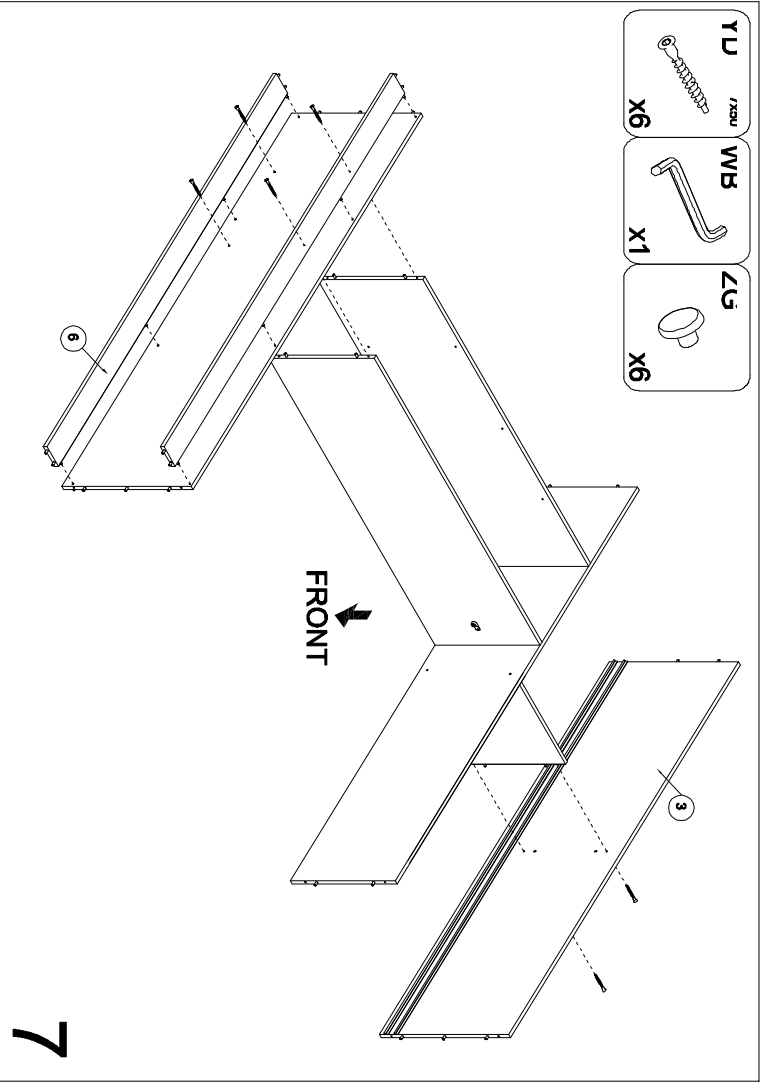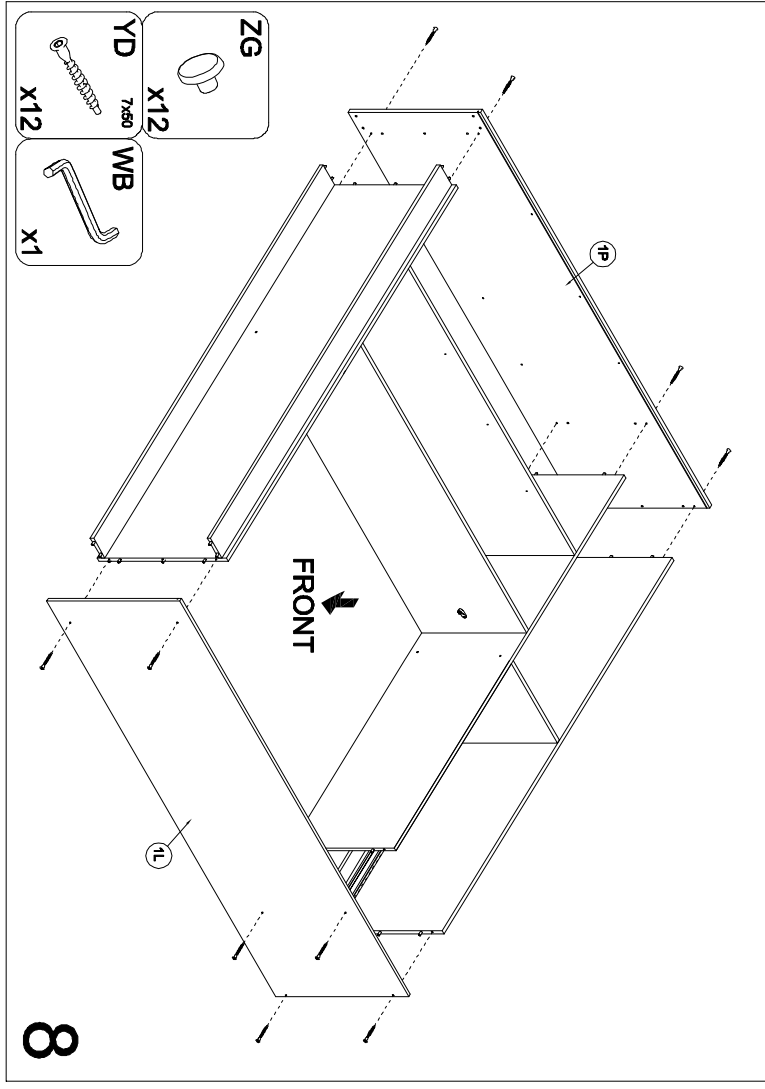    


- ZB
x24
- W6 L-1076mm
x1

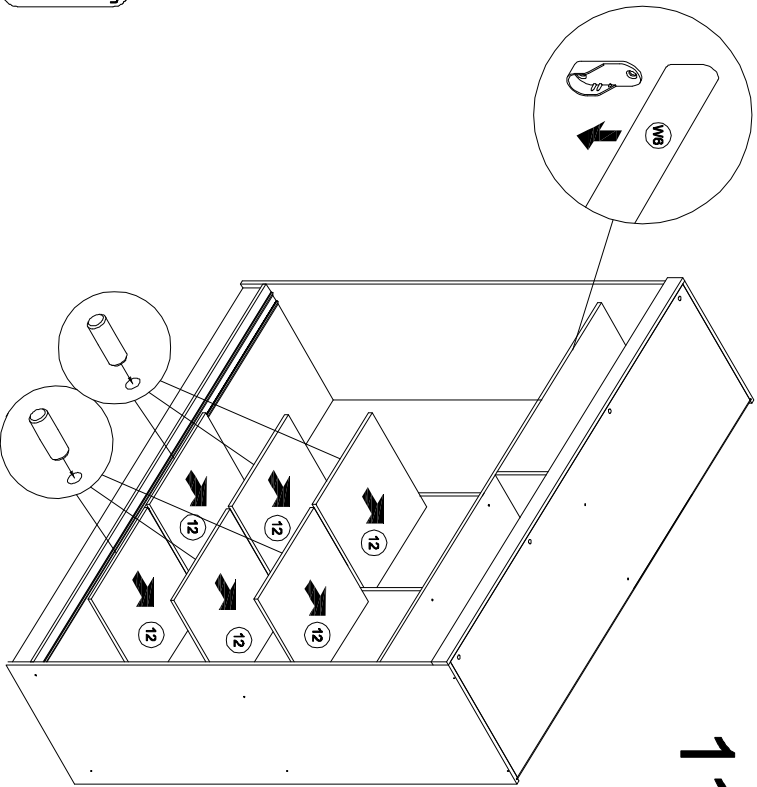 


11

 - W
x2
- UA
x4
- U
x4
- NF-
4x30
x12
- H
6.3x13
x16
- ND
3.5x16
x12


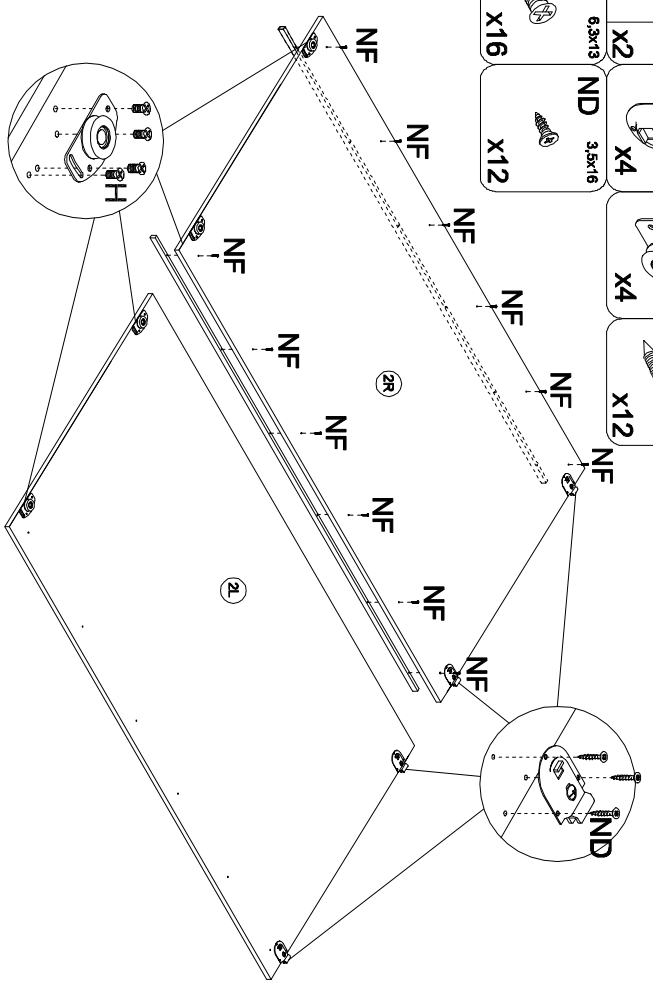


12

 - DB L-1890mm
x2

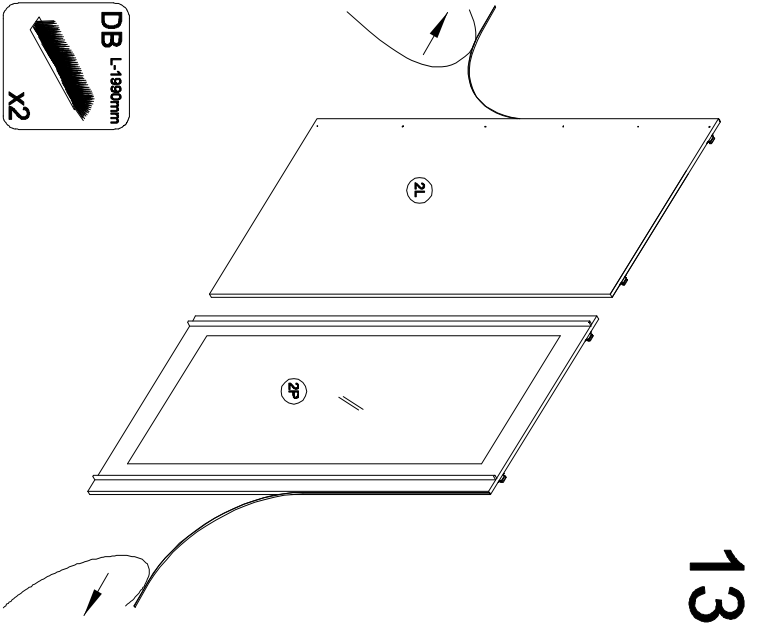


13

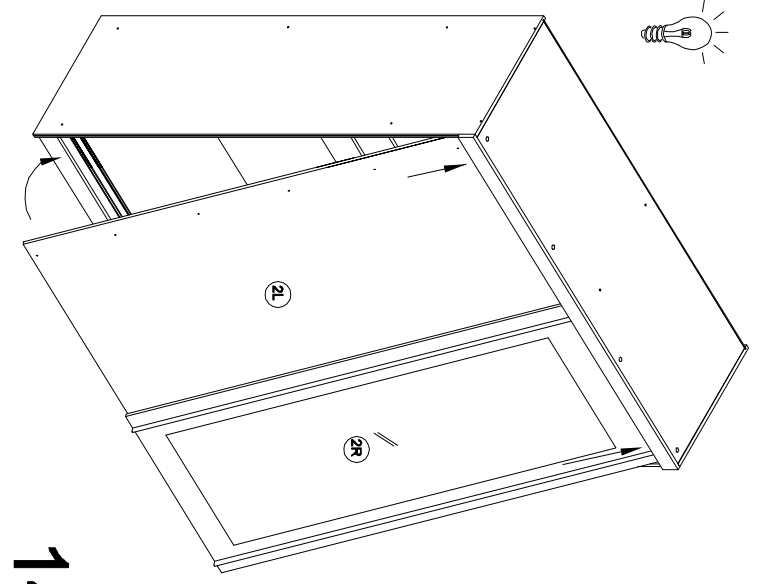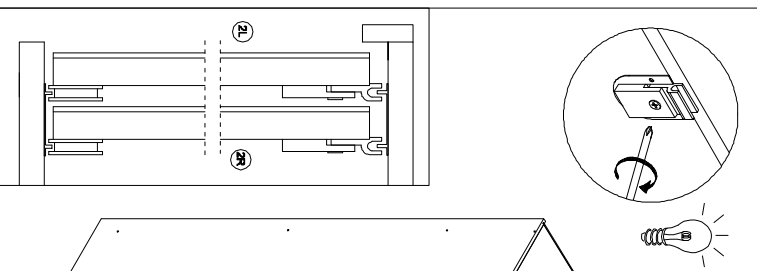  

14

 - W
x1
- NF
4x30
x6

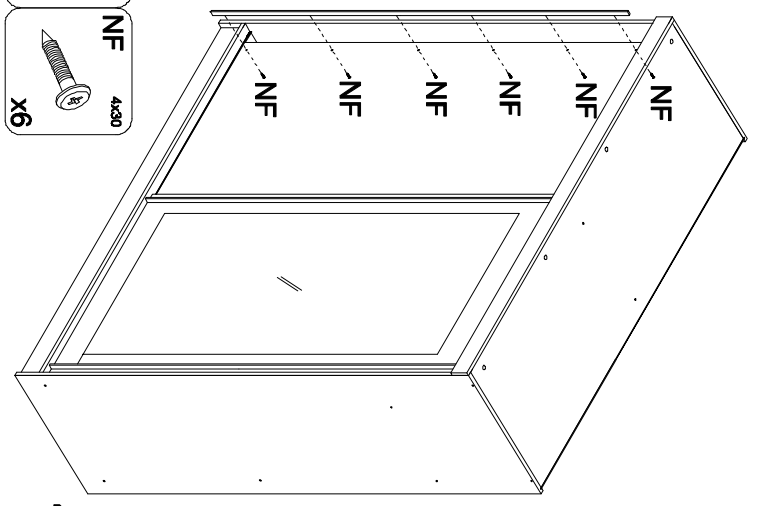

15